



## Codian License Entry



THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California. NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at <http://www.cisco.com/go/trademarks>. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Codian License Entry  
<Month> 2011 Edition  
© 2011 Cisco Systems, Inc. All rights reserved.

## Table of Contents

<b>1</b>	<b>INTRODUCTION</b> .....	<b>4</b>
1.1	Release Notes .....	4
<b>2</b>	<b>CODIAN LICENSE ENTRY</b> .....	<b>4</b>
<b>3</b>	<b>ENTERING LICENSES FOR THE IPVCR</b> .....	<b>4</b>
3.1	Getting to the License entry screen .....	4
3.2	Entering Licenses.....	5
<b>4</b>	<b>ENTERING IPGW LICENSE KEYS</b> .....	<b>5</b>
4.1	Getting to the license entry screen .....	5
4.2	Entering Licenses.....	5
<b>5</b>	<b>ENTERING LICENSES FOR THE ISDNGW</b> .....	<b>6</b>
5.1	Getting to the License page .....	6
5.2	Entering Licenses.....	7

## List of Tables

<b>Table 1 - Release Notes</b> .....	<b>4</b>
--------------------------------------	----------

## List of Figures

<b>Figure 1 - Settings</b> .....	<b>4</b>
<b>Figure 2 - Activation code and Update features</b> .....	<b>4</b>
<b>Figure 3 - Settings - Upgrade</b> .....	<b>5</b>
<b>Figure 4 - Activated features</b> .....	<b>5</b>
<b>Figure 5 - Activation code and Update features</b> .....	<b>6</b>
<b>Figure 6 - Settings - Upgrade</b> .....	<b>6</b>

## 1 Introduction

This document provides instructions for creating the Codian license entry.

### 1.1 Release Notes

Table 1 - Release Notes

Technical Change	Title(s) of Affected Section(s)	Changes Made By	Date

## 2 Codian License Entry

Complete the following steps to create the Codian license entry.

### 3 Entering Licenses for the IPVCR

To enter a license for the IPVCR:

1. Enter the IP of the IPVCR into a browser window.
2. Log in as **Administrator**.

#### 3.1 Getting to the License entry screen



Figure 1 - Settings

To get to the license entry screen and upgrade the settings:

1. Click on **Settings**.
2. Click on **Upgrade**.

The **Feature Management** section displays the activated licenses.

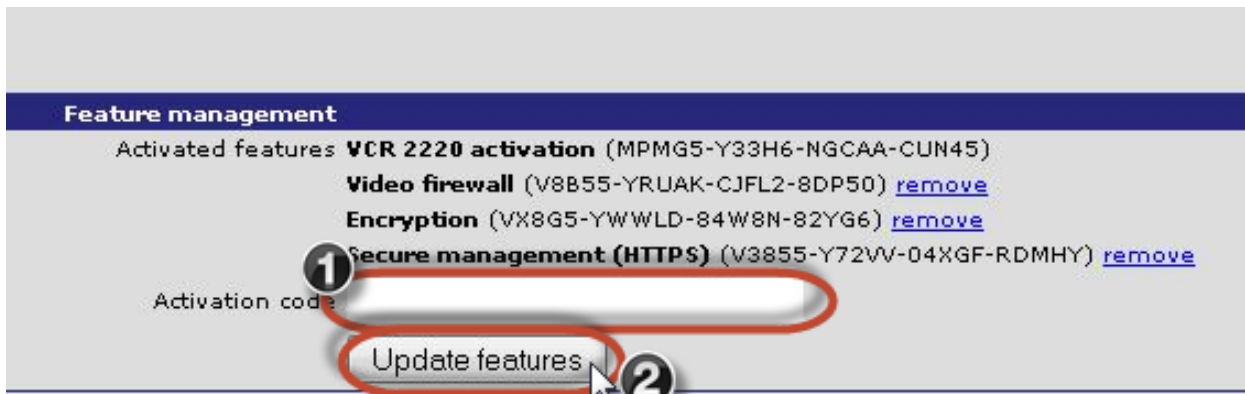


Figure 2 - Activation code and Update features

### 3.2 Entering Licenses

In the **Feature management** section, to enter the licenses:

1. Enter the `Activation Code`.
2. Click on **Update features**.

### 4 Entering IPGW License Keys

To enter the IPGW license keys:

1. Enter the IP of the IPGW into a browser window.
2. Log in as **administrator**.

#### 4.1 Getting to the license entry screen


As shown in the Settings section:



**Figure 3 - Settings - Upgrade**

1. Click on **Settings**.
2. Click on **Upgrade**.

The Feature Management section displays the **Activated features**.

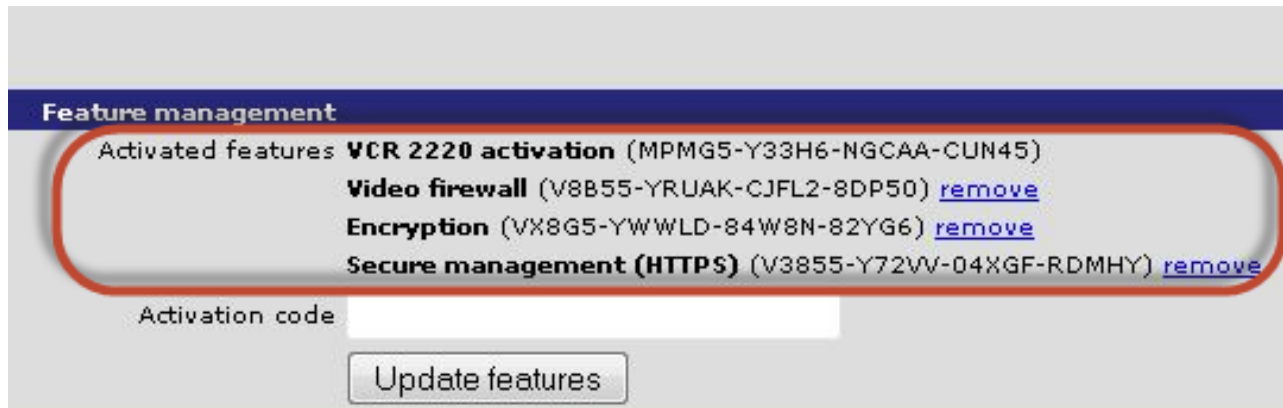

**Figure 4 - Activated features**

#### 4.2 Entering Licenses

As shown in the **Feature management** section:

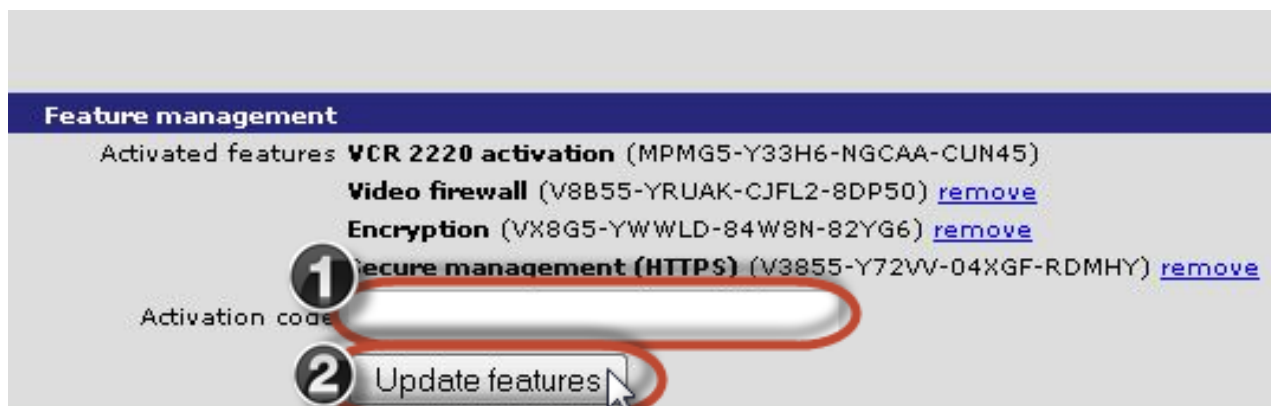


Figure 5 - Activation code and Update features

1. Enter the Activation code.
2. Click **Update features**.

## 5 Entering Licenses for the ISDNGW

To enter licenses for the ISDNGW:

1. Enter the IP of the ISDNGW into a browser window.
2. Log in as **administrator**.

### 5.1 Getting to the License page

As shown in the following example, to get to the Codian license page and upgrade the settings:

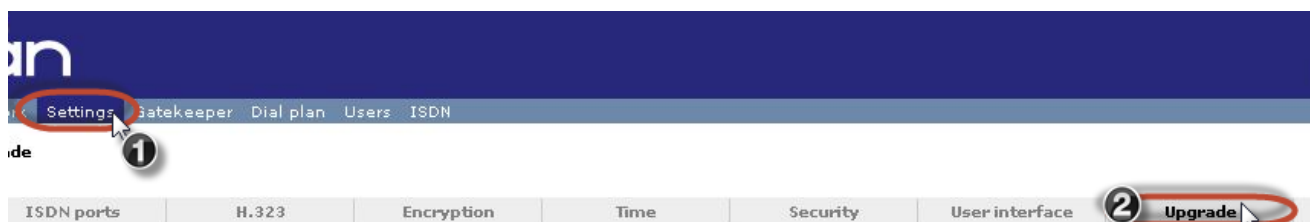


Figure 6 - Settings - Upgrade

1. Click **Settings**.
2. Click **Upgrade**.

The following **Feature Management** section shows the activated features



## 5.2 Entering Licenses

In the **Feature management** section, to enter the licenses:



1. Enter the activation code.
2. Click **Update Features**.

**End of Document**

Codian License Entry