



TelePresence

Instructions for Entering Codian (IPVCR, IPGW, PSDNGW)
License Entries

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California. NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at <http://www.cisco.com/go/trademarks>. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Instructions for Entering Codian (IPVCR, IPGW, PSDNGW) License Entries
August 2012 Edition
© 2012 Cisco Systems, Inc. All rights reserved.

Table of Contents

1	INTRODUCTION	4
1.1	Release Notes	4
2	ENTERING IPVCR LICENSES	4
2.1	Getting to the License entry screen	5
2.2	Entering Licenses.....	5
3	ENTERING IPGW LICENSE KEYS	6
3.1	Getting to the License Entry Screen	6
3.2	Entering Licenses.....	7
4	ENTERING ISDNGW LICENSES	8
4.1	Getting to the License page	8
4.2	Entering Licenses.....	9

List of Tables

Table 1 - Release Notes	4
--------------------------------------	----------

1 Introduction

This document provides instructions for entering **Codian (IPVCR, IPGW, PSDNGW)** license entries.

1.1 Release Notes

Table 1 - Release Notes

Technical Change	Title(s) of Affected Section(s)	Changes Made By	Date
Initial Release		Carl Dunkelberger	7/10/2012
Changed title and introductory text.			8/9/2012

2 Entering IPVCR Licenses

To enter a license for the **IPVCR**:

1. In the browser window, enter the IP of the IPVCR into a browser window.
2. Log in as **Administrator**.

The following **Codian IPVCR** window is displayed.

The screenshot displays the Codian web interface for an IPVCR device. The top navigation bar includes the Codian logo, the host name 'IPVCR2220', and a 'log' link. Below the navigation bar, the 'Upgrade' section is active, showing options for 'Main software image' and 'Loader software'. The 'Main software image' section shows the current version as 3.0(1.22) and provides a 'Browse...' button for selecting a new image file, followed by an 'Upload software image' button. A note indicates 'For normal upgrades.' The 'Loader software' section shows the current version as 1.0(0.1) and also provides a 'Browse...' button and an 'Upload software image' button, with a note: 'Only for use with upgrades under the guidance of TANDBERG customer support.' Below the upgrade section, there are sections for 'Back up and restore', including 'Back up configuration' with a 'Save backup file' button and a warning, and 'Restore configuration' with checkboxes for 'Network settings' and 'User settings', a 'Browse...' button for the backup file, and a 'Restore backup file' button with a warning. The 'Feature management' section shows a list of activated features: 'VCR 2220 activation (MPMG5-Y33H6-NGCAA-CUN45)', 'Video firewall (V8855-YRUAJ-CJFL2-8DP50) remove', 'Encryption (VX8G5-YWVLD-84W8N-82YG6) remove', and 'Secure management (HTTPS) (V3855-Y72VV-04XGF-RDMHY) remove'. An 'Activation code' field is present with an 'Update features' button.

2.1 Getting to the License entry screen



To get to the license entry screen and upgrade the settings:

1. Click **Settings (1)**.
2. Click **Upgrade (2)**.

The **Feature Management** section displays the activated licenses.



2.2 Entering Licenses

To enter the licenses, in the **Feature management** section:


1. Enter the **Activation code (1)**.
2. Click **Update features (2)**.

3 Entering IPGW License Keys

To enter the IPGW license keys:

1. Enter the IP of the IPGW into a browser window.
2. Log in as **Administrator**.


The following **Codian IPGW** window is displayed.

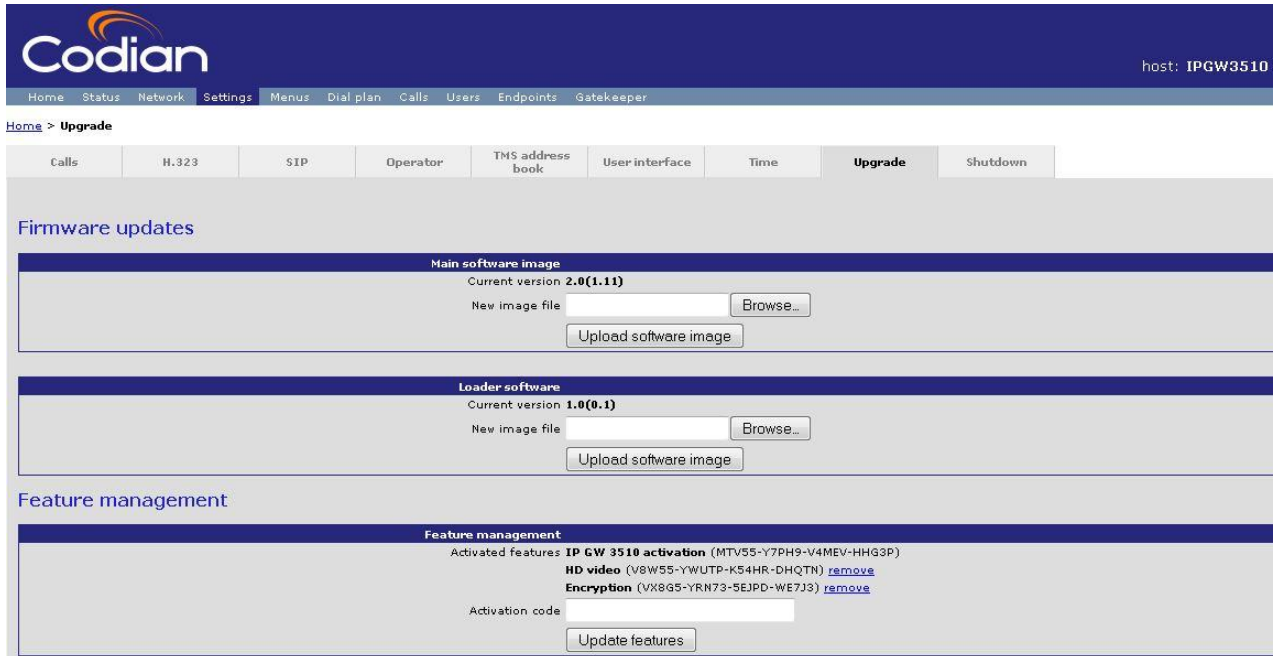


3.1 Getting to the License Entry Screen

As shown in the following **Settings** section:

1. Click on **Settings (1)**.
2. Click on **Upgrade (2)**.

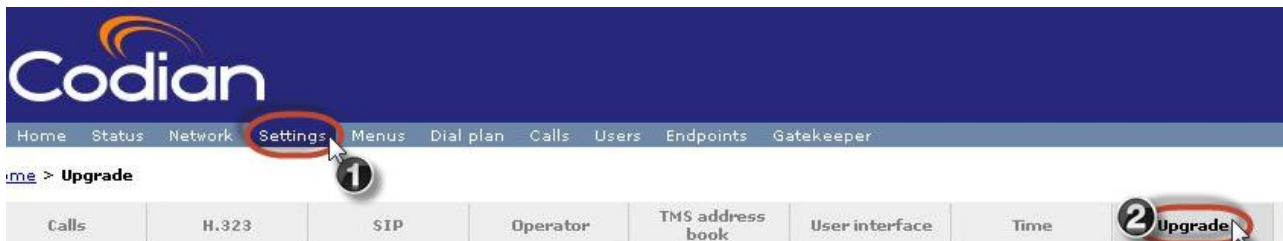

The following **Feature Management** section displays the **Activated features**.

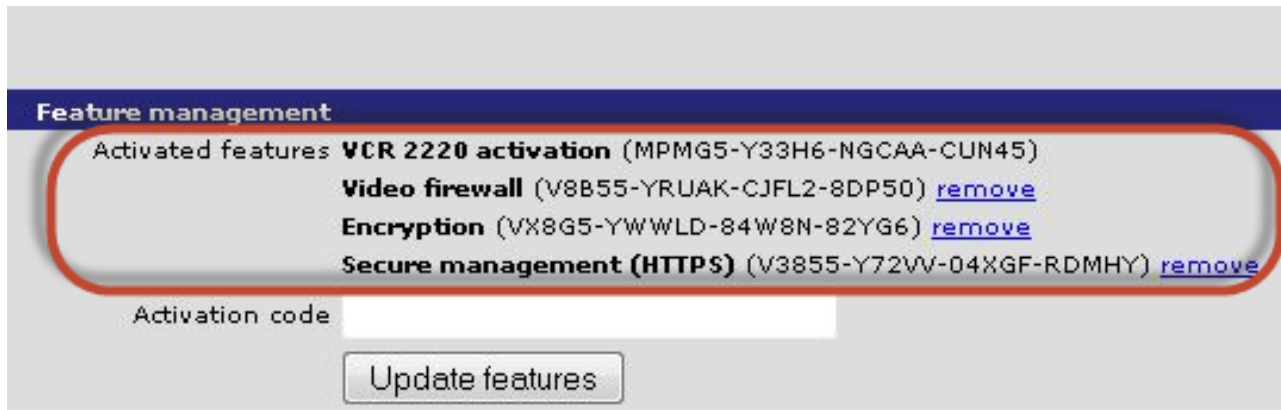

3.2 Entering Licenses

To enter licenses, in the **Feature management** section:

1. Enter the **Activation code** in the box (1).
2. Click **Update features** (2).



4 Entering ISDNGW Licenses

To enter licenses for the ISDNGW:

1. Enter the IP of the ISDNGW into a browser window.
2. Log in as **administrator**.

The following **ISDNGW** window is displayed.

4.1 Getting to the License page

As shown in the following example, to get to the Codian license page and upgrade the settings:

1. Click **Settings (1)**.
2. Click **Upgrade (2)**.

The following **Feature Management Section** shows the activated features



4.2 Entering Licenses

To enter licenses, in the **Feature management** section:

1. Enter the **Activation code (1)**.
2. Click **Update Features (2)**.



End of Document