



**CISCO**

## 3.6 配置一号通（Mobile Connect）

（1）增加 SNR 的用户，或在现有用户配置上增加 SNR 功能，选择 “User Management>End User>Add New”，填写相应信息，点击 “Save”。

Cisco Unified CM Administration  
For Cisco Unified Communications Solutions

System ▾ Call Routing ▾ Media Resources ▾ Advanced Features ▾ Device ▾ Application ▾ User Management ▾ Bulk Administration ▾ Help ▾

**End User Configuration**

Save ~~X~~ Delete + Add New

**Status**  
Status: Ready

**User Information**

User ID\* test1

Password ..... Edit Credential

Confirm Password .....

PIN ..... Edit Credential

Confirm PIN .....

Last name\* Test1

Middle name

（2）勾选 “Enable Mobility”，“Enable Mobile Voice Access”，选择 Primary User Device 及 Primary Extension。

“Primary User Device”：选择之前已经注册的一部 IP 电话。

Cisco Unified CM Administration  
For Cisco Unified Communications Solutions

System ▾ Call Routing ▾ Media Resources ▾ Advanced Features ▾ Device ▾ Application ▾ User Management ▾

**End User Configuration**

Save ~~X~~ Delete + Add New

**Mobility Information**

Enable Mobility

Primary User Device SEP0005323DB1EB


Enable Mobile Voice Access

Maximum Wait Time for Desk Pickup\* 10000


Remote Destination Limit\* 4



(3) 配置 Remote destination profile 并与用户对应，选择 “Device>Device Settings>Remote Destination Profile”。

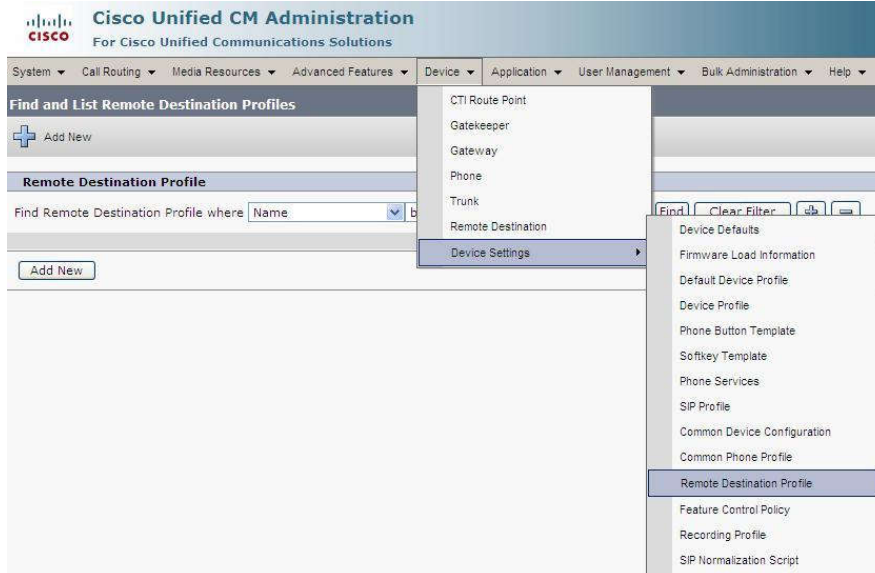

(4) 选择 “Add New”，填写相应的信息，点击 “Save”。

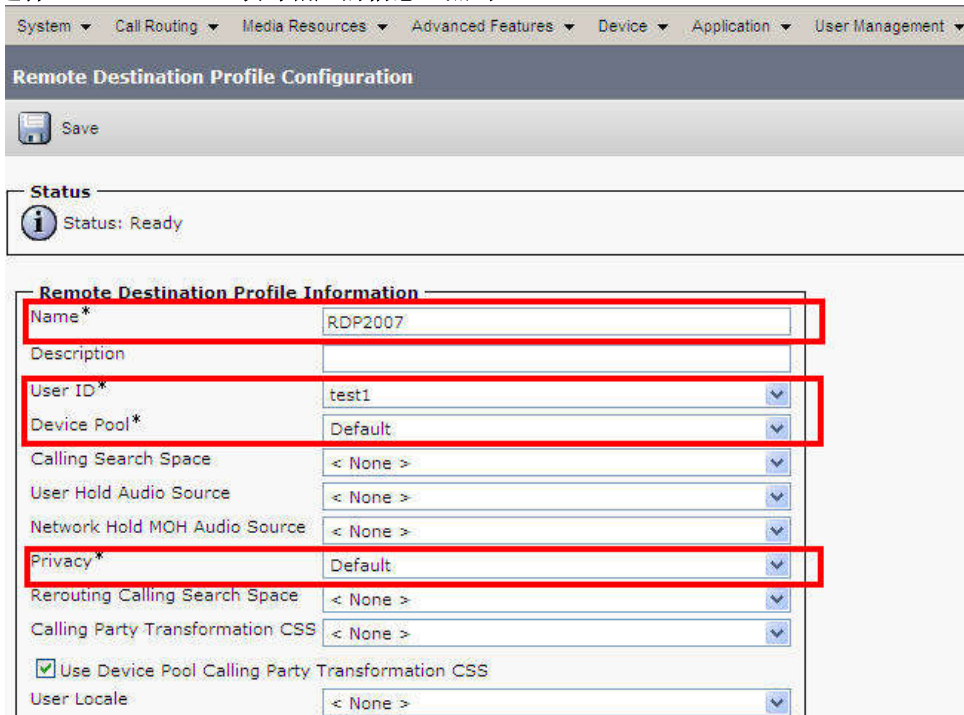



**CISCO**

(5) 添加电话号码。

Association Information	
1	<a href="#">Add a new DN</a>

Name*	RDP2007
Description	
User ID*	test1
Device Pool*	Default
Calling Search Space	<None >
User Hold Audio Source	<None >

(6) 输入电话号码，然后点击“Save”和“Apply Config”。

Directory Number*	2007
Route Partition	<None >
Description	
Alerting Name	
ASCII Alerting Name	

(7) 配置 Remote Destination，选择“Device>Remote Destination”，点击“Add New”

Name	1001
Destination Number	1001
Answer Too Soon Timer*	1500
Answer Too Late Timer*	19000
Delay Before Ringing Timer*	4000
Remote Destination Profile*	RDP2007
<input type="checkbox"/> Mobile Phone	
<input checked="" type="checkbox"/> Enable Mobile Connect	



(8) 选择 “Always ring this destination”，点击 “Save” 。

(9) 勾选 “Line Association” 选项，并点击 “Save” 。





(10) 设置 Mobility Softkey Configuration，选择 “ Device > Device Settings > Softkey Template ”，点击 “ Find ” 。



(11) 创建一个新的模板，点击“Standard User”模板，然后点击“Copy”


System ▾ Call Routing ▾ Media Resources ▾ Advanced Features ▾ Device ▾ Application ▾

### Softkey Template Configuration

 Copy  Add New  Reset  Apply Config

---

**Status**

 Status: Ready

---

**Softkey Template Information**


Name\*

Description

Applications\*


Default Softkey Template

(12) 为新模板定义名称，然后点击“Save”

 **Cisco Unified CM Administration**  
For Cisco Unified Communications Solutions


System ▾ Call Routing ▾ Media Resources ▾ Advanced Features ▾ Device ▾ Application ▾ Us

### Softkey Template Configuration

 Save

---

**Status**

 Status: Ready

---

**Softkey Template Information**

Name\*

Description

Applications\*

Default Softkey Template



(13) 选择右上角下来菜单的“Configure Softkey Layout”后，点击“Go”。



(14) 选择“On Hook”从下来菜单中，从左侧把“Mobility”移至右侧，并移至最上方，点击“Save”。




(15) 同样在“Connected”选项中，从左侧把“Mobility”移至右侧，并移至最上方，点击“Save”。






(16) 打开定义的电话，关联所创建的 Softkey 模板。

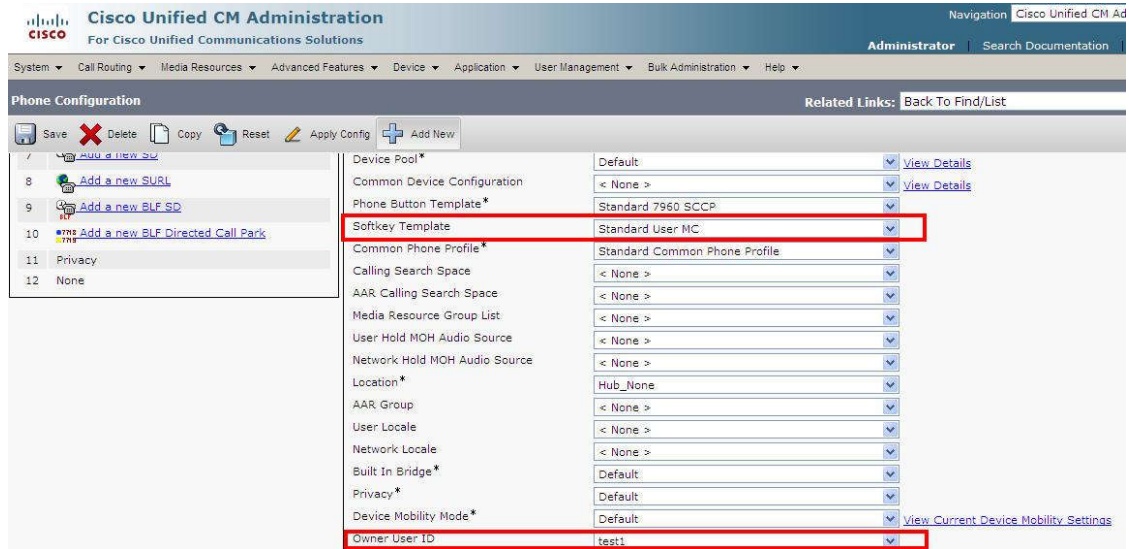

### 3.7 配置 SRST

(1) CUCM SRST 配置，System>SRST，选择“Add New”，填写相应信息。

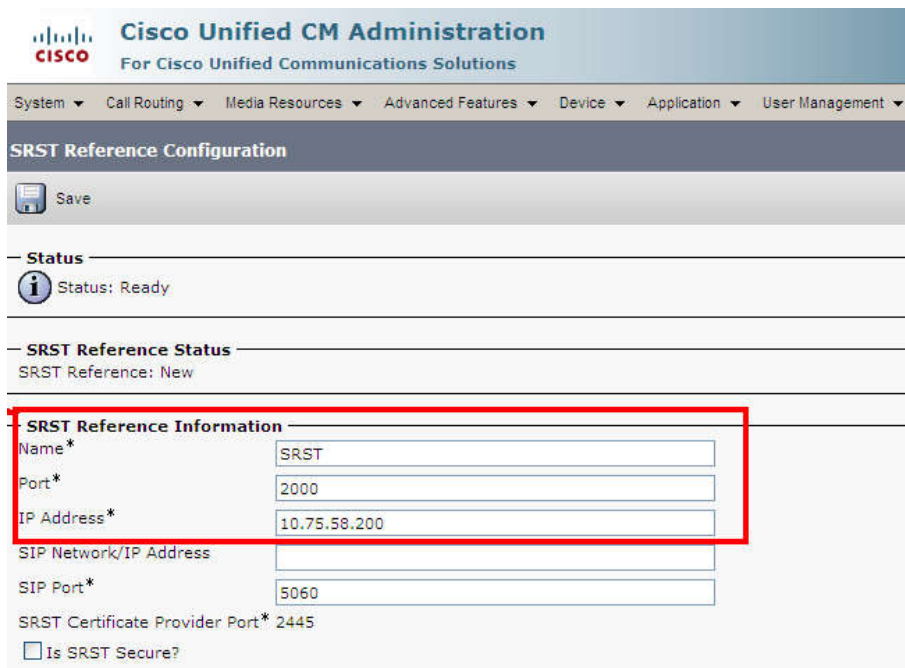

点击“Save”