
Physically Outside Interface can connect to ISR4331 Routers Router Side Interface or UCS External Interface

User Machine will be connected to NIM Switch Ports of ISR Router

ASAv Need to be installed at UCS-E Vmware

Traffic coming from Outside to Inside 2 Interfaces need to go through ASAv Firewall at UCS-E

Server subnet will be one of the Inside subnet and Servers will be installed in UCS-E

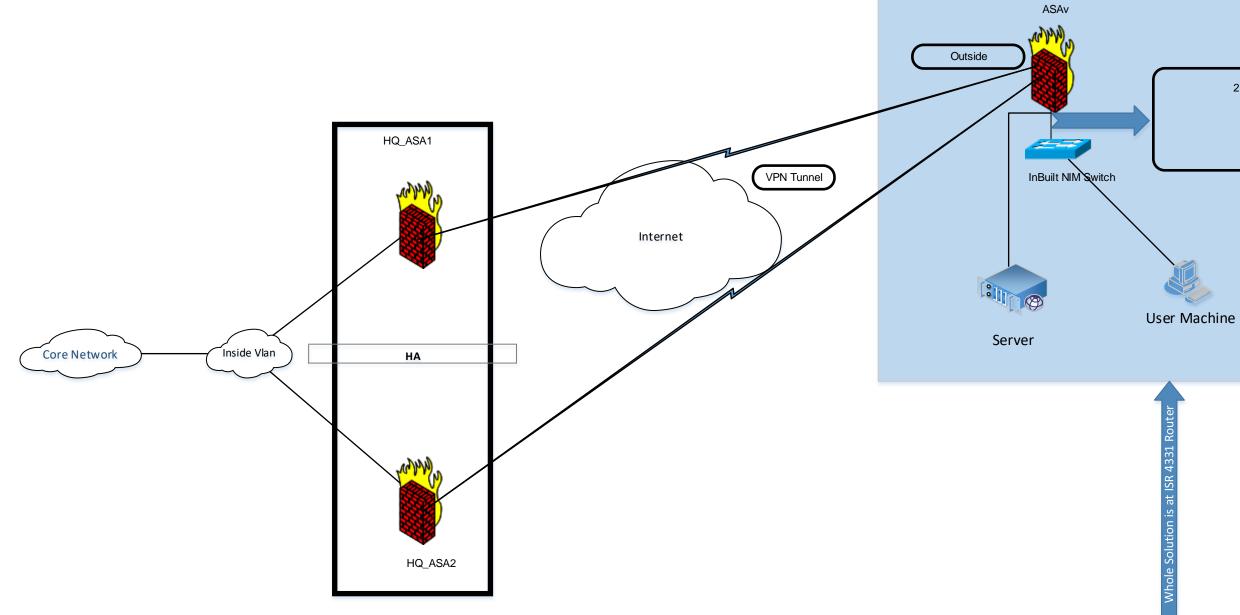

2 Inside Subnet of Firewall

>> Inside Subnet

>>>User Subnet >>>Server Subnet