



1. Production Network of current wireless network setup

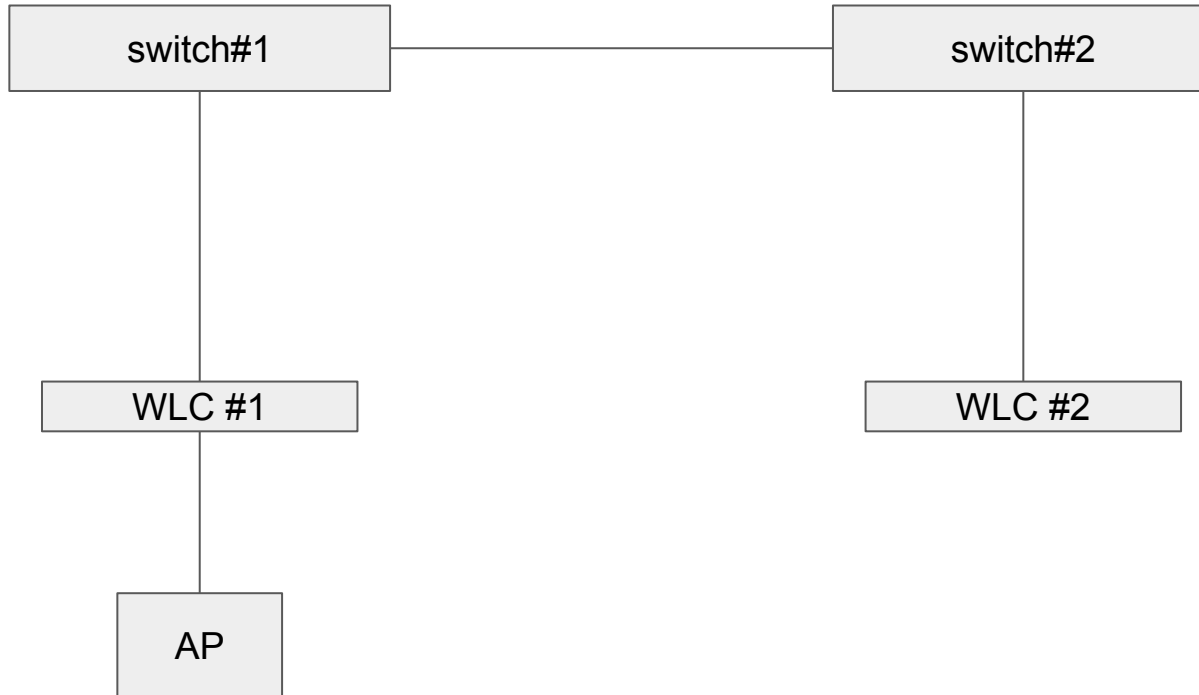


2. Add new WLC #1 and create another dynamic interface in Vlan 500 on new WLC #1 to refresh WLC seamlessly.

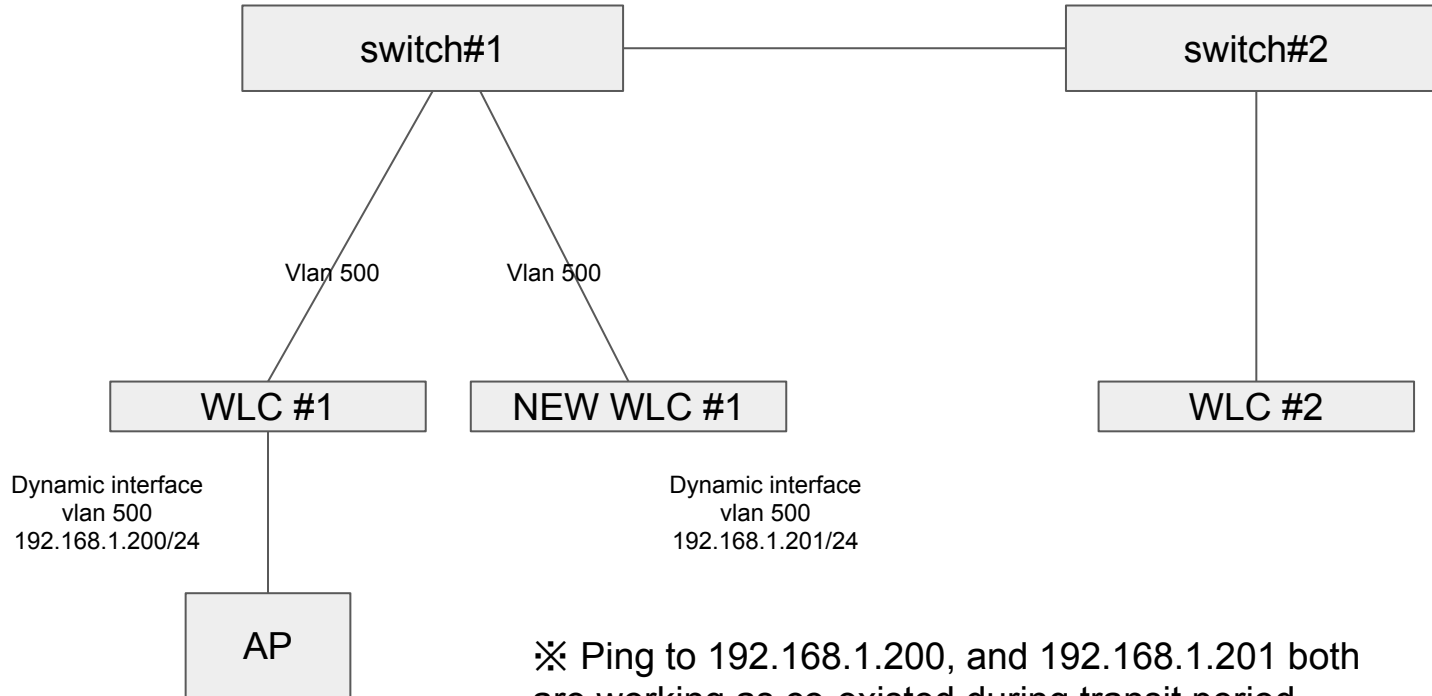

※ Ping to 192.168.1.200, and 192.168.1.201 both are working as co-existed during transit period.

3. De-register with current wlc #1 and register AP to new WLC #1 and test to see if no issue with Vlan 500.

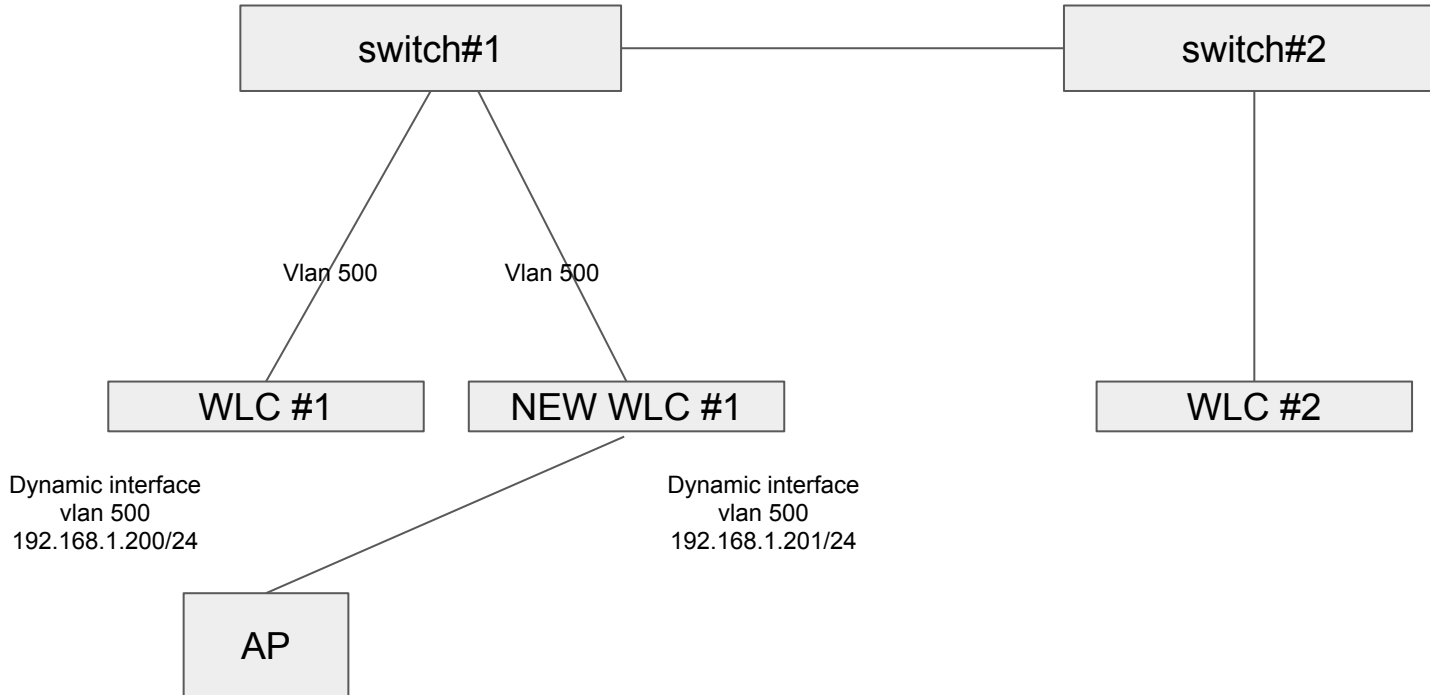

4. User testing is done via new WLC #1, then shutdown previous WLC #1 to disconnect from network.

